

Installation Instruction

Method 1:

A secure closed hook can be fixed onto the shore line anchor point.

Use fishing line or polypropylene rope to tie the float. (See Figure 1)

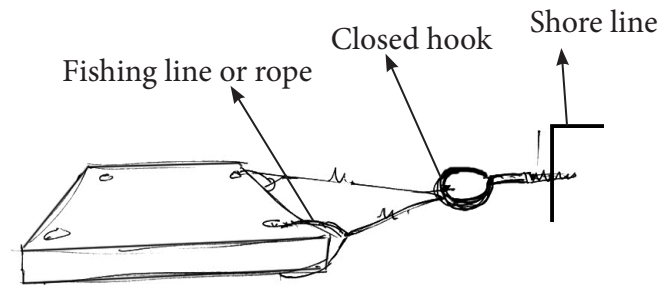


Figure 1

Method 2:

Anchor method using 4 concrete building blocks as weights to secure the each corner of the float. Tie the float with fishing line or polypropylene rope.

Important: please make sure that all securing ropes/fishing lines have enough free play to allow for any changes in the water level.

(See Figure 2)

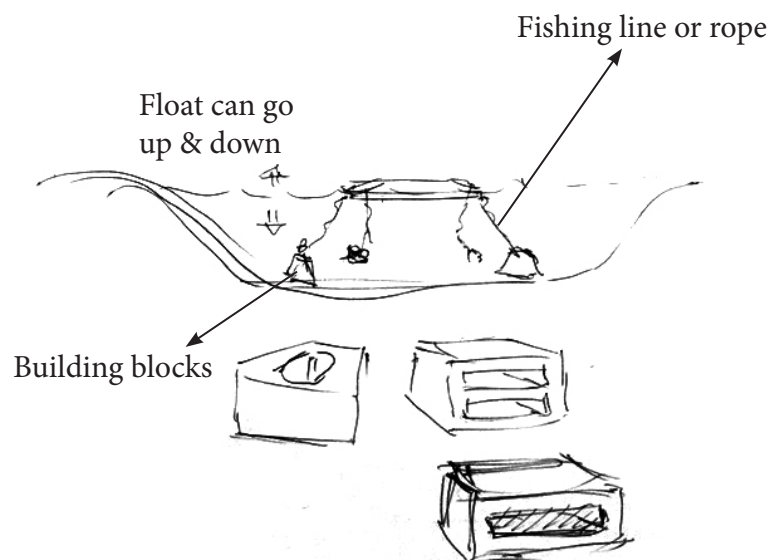


Figure 2 - lined pond